



TECHNICAL DATA SHEET

SKI LOCKERS

1 and 2 SERIES





CHARACTERISTICS

Monoblok welded locker is made of electroplating steel: Steel with a protective coating of zinc applied to both sides by an electrolysis process. This material combines high resistance to corrosion and an optimal finish with excellent deep drawing and welding characteristics. This material is particularly suitable for the manufacture of metal furniture, especially for those manufacture with high exposure to moistness.

DC01 steel quality according to the European regulation EN 10130 with a carbon content less than 0.12%.

Thickness of 0.8 mm.

Amorphous phosphating treatment prior to the passivation painting and degreasing.

Drying in oven at 180° C for 15 minutes.

Painted with Epoxy-polyester powder paint using robotised booths.

Body

Painted in white RAL 9010 Microtextured paint. Minimum thickness 50 microns.

Door with longitudinal reinforcement, ventilation, and hidden hinges.

Three-point closing lever handle with two keys.

Inner shelf, adjustable to three different heights with space for skis.

Includes boots hanger:

SKI-1, 4 pairs of boots

SKI-2, 2 pairs of boots

Welded inner hangers.

Ventilation louvers inside.

Perforated floor to prevent moisture accumulation.

1.5 mm-thick galvanised steel legs. Height 100 mm. Adjustable PVC leg caps (max. 20 mm) screwed to the steel legs.

Hydrochloric acid or iron products in prolonged contact are also not recommended.

VERY IMPORTANT: After using the product, it must be thoroughly dried (with a soft cloth) as moisture will cause corrosion on the metal lockers.





METALLIC COLOURS

STANDARD COLOUR




RAL 9010
Pure white
Código HEX: #f1ece1

GROUP 1



 
RAL 5010
Gencana blue
Código HEX: #004f7c




RAL 7035
Luminous grey
Código HEX: #c5c7c4



 
RAL 3000
Red
Código HEX: #a72920



RAL 6034
Pastel turquoise
Código HEX: #7aacac

 


RAL 7016
Anthracite grey
Código HEX: #383e42

 

RAL 9005
Intense black
Código HEX: #0e0e10

 GROUP 2



RAL 9001
Cream white
Código HEX: #e9e0d2



RAL 1017
Saffron yellow
Código HEX: #f6a950



RAL 1021
Rapeseed yellow
Código HEX: #f6b600



RAL 2004
Pure orange
Código HEX: #e25303



RAL 3017
Pink
Código HEX: #cb555d



RAL 3005
Wine red
Código HEX: #59191f



RAL 4005
Lilac
Código HEX: #76689a



RAL 6029
Mint green
Código HEX: #006f3d



RAL 5015
Sky blue
Código HEX: #007cb0



RAL 5023
Distant blue
Código HEX: #42698c



RAL 9006
White aluminium
Código HEX: #a1a1a0




RAL 7036
Platinum grey
Código HEX: #979392

LOCKS




Lock of shutter-bolt

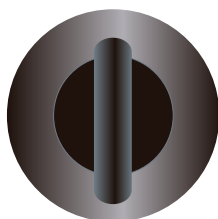


Padlockable Polyamide Lock



Padlockable Metallic Lock 1

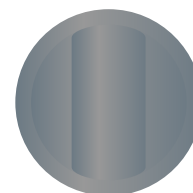


Padlockable Metallic Lock 2

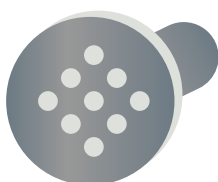

Metal handle




Coin-operated Lock
(coin-return)

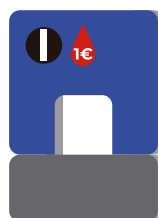

Coin-operated Lock + Coin
Collect Box




Lock of 4 manual digits with
emergency key

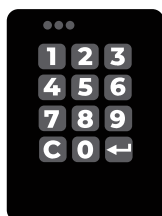

TELEC

Electronic lock combination

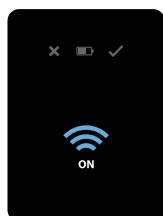

PROXI

Electronic lock of proximity



TELOCK

Electronic lock combination




SOLOCK

Electronic lock combination




OPTIONS

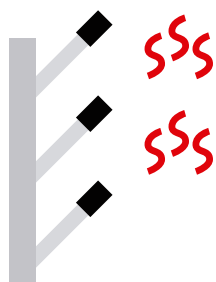


Heating option

COMBINATIONS AND DIMENSIONS

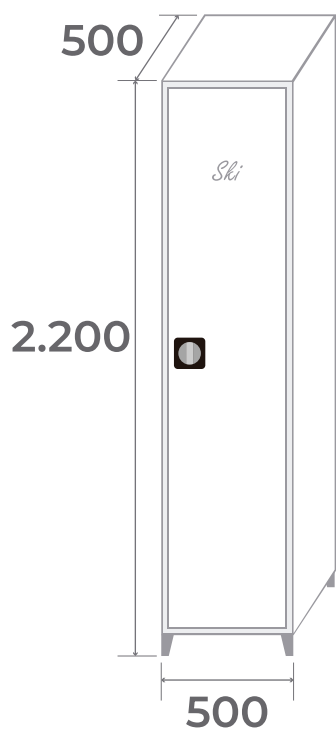

SKI-1
44kg · 0,55m³

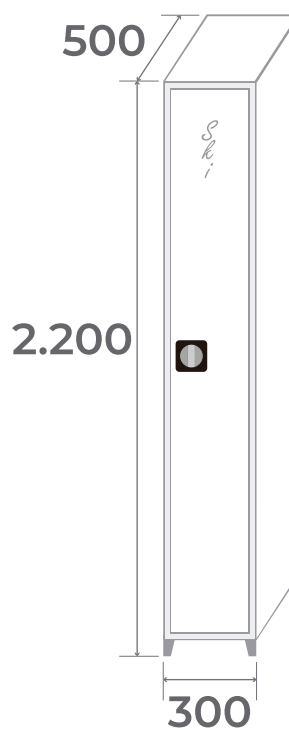

SKI-2
31kg · 0,33m³



Height x Width x Depth

SKI-1

2.024x432x466 mm

SKI-2

2.024x232x466 mm

WALL FIXING

Installation recommendation

It is recommended to secure the locker to the wall to ensure stability and prevent tipping during use. Select the most suitable screws, washers and plugs according to the type of wall to which the unit will be anchored.

Fittings not included.

OPTION WITH HEATING (INSTRUCTIONS MANUAL)

Introduction

First of all, thank you for purchasing this product.

Please follow this installation and care guide carefully to ensure the long-term use of this product.

Please keep this document for future reference, troubleshooting or technical assistance.

Technical data

This machine is subject to the Low Voltage Electrotechnical Regulation (REBT) in the category of Heating Appliances ITC-BT-45. Power grid 1~220/230V - 50Hz.

It has a N.C. thermostat at 85°C so in case to be exceeded internally, the machine will be disconnected itself from the grid.

It includes a 2.5amp fuse in the lower part, inside the grid connector

Installation

Choose a location away from direct water sources and try to not to cover the sides of the machine to let the air penetrate.

The machine will be attached to the wall through the holes provided in the back cover.

There is a 1.8 m length cable included.

Working modes

There are two working modes: MANUAL MODE y AUTOMATIC MODE.

Mode selection

Both options are selected from the ABB-AT1 timer switch on the front of your machine, by moving the selector up or down as shown in the figure.

Manual mode.

Once the manual mode has been selected, the machine will work depending on the start switch is pressed, or it isn't.

Automatic mode.

Move the selector to the upper position to set the AUTOMATIC MODE.

Using the wheel, you can set the current time and release the wheel clicks to set the intervals which you want the machine to be working at.

If the machine is disconnected from the grid, the clock will stop rotating and therefore the time you have set will be lost.

Model	Dimensions (mm)			Power (w)
	Height	Width	Depth	
2 pairs	650	260	250	200
4 pairs	1.100	260	250	200/300
6 pairs	1.600	260	250	350/400
7 pairs	1.900	400	250	700/800
10 pairs	1.900	400	250	700/800



OPTION WITH HEATING (INSTRUCTIONS MANUAL)

TROUBLESHOOTING

Before anything else, don't open this machine under no circumstances without the assistance of a qualified person.

Here we list some of the most likely faults, their causes and solutions.

Fault	Cause	Solution
The boots heater doesn't switch on and the LED indicator is off.	The fuse could be blown out. The machine isn't connected to the grid.	Replace the fuse with one of the same features. If it remains, please contact us.
The boots heater doesn't switch on, but the LED indicator lights.	The timer is on the automatic mode at the off area.	Set it on the manual mode. If it remains, please contact us.
The RCD trips.	Two possible causes: The power of your wiring is not enough**. There is an electric fault on the machine.	Contact an electrician or contact us. Under no circumstance open the machine for your security.

** Sometimes, the grid which this machine is connected to doesn't have the power required (e.g.: the grid of some storage rooms).